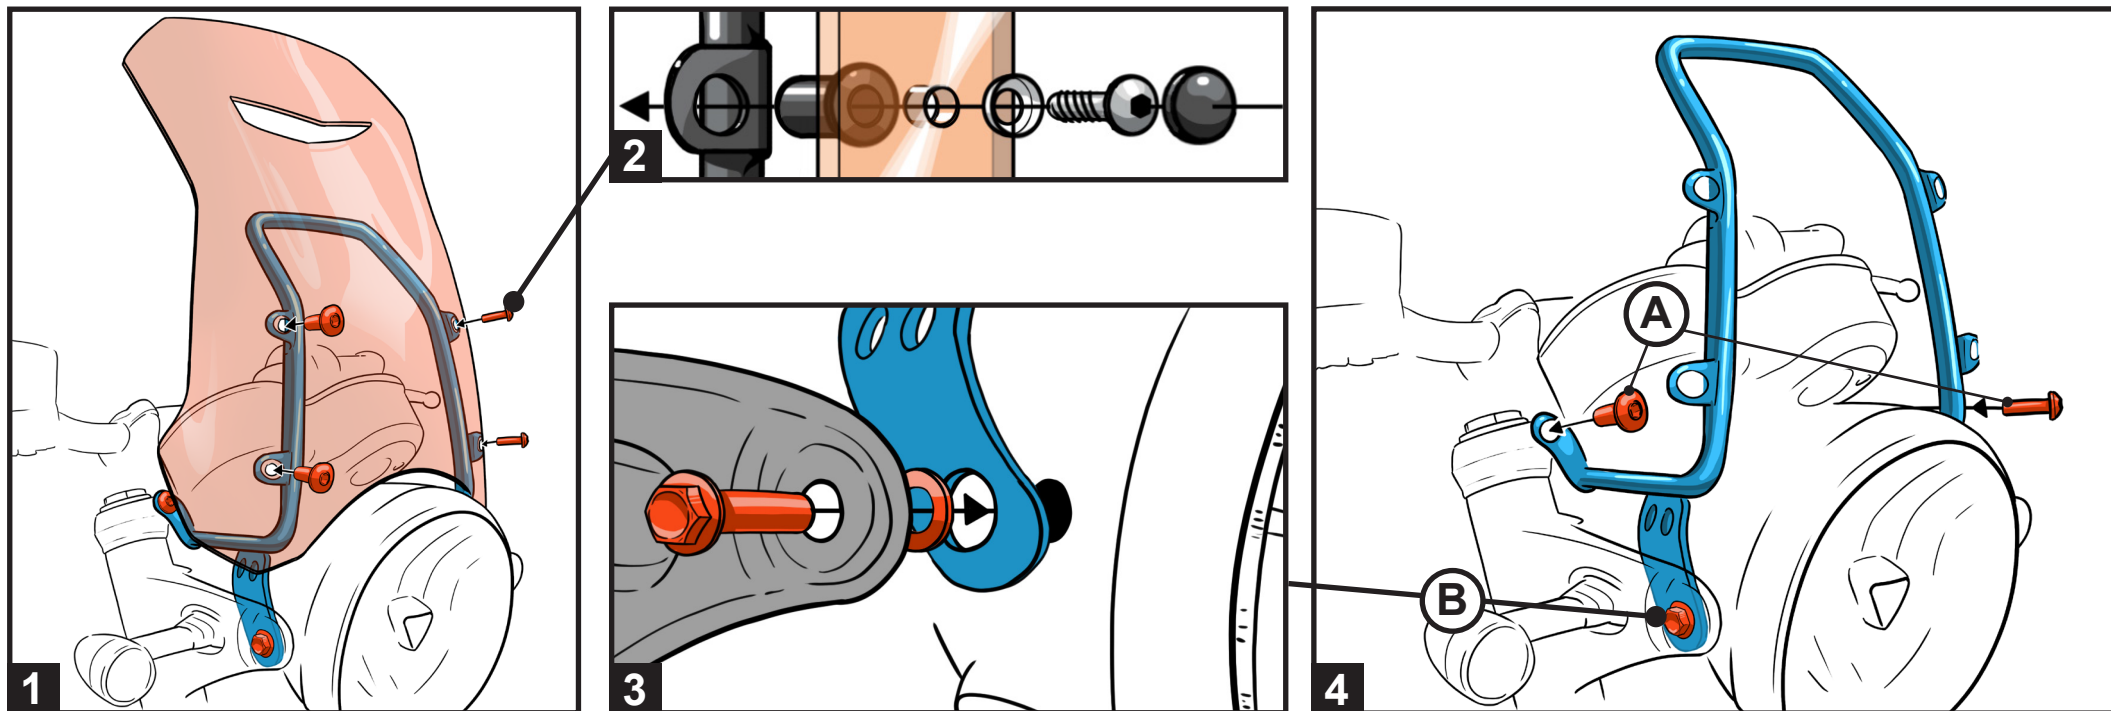


**ATTENZIONE!**Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.**WARNING!**Carefully read the '*Important informations*' sheet before starting.

EN_ Mount the windshield on the Unit garage frame: position the 4 wellnuts in the holes provided on the frame and insert the 4 screws with the plastic washer under the screw (see figures 1-2)

Remove the two screws of the fork upper triple clamp A. Remove the two screws of the headlight B and insert the Unit garage frame between the headlight and the headlight supports, leaving the original washer outside the frame, the screws must not be tightened for now (see figure 2) Fix it in A using the **two aluminum spacers** between the triple clamp and the frame using the supplied M8 screws. Once everything is positioned correctly, tighten the screws and finally insert the 4 caps on the windscreen fixing screws.

IT_ Montare il parabrezza sul telaio Unit garage: posizionare i 4 wellnuts nei fori previsti sul telaio e inserire le 4 viti con la rondella in plastica sotto alla vite (vedi figure 1-2).

Rimuovere le due viti della piastra superiore forcella A. Rimuovere le due viti del faro B e inserire fra il faro e i supporti faro, il telaio Unit garage lasciando la rondella originale esterna al telaio, le viti per ora non vanno strette (vedi figure 3-4) Fissarlo in A utilizzando i **due distanziali in alluminio** tra le piastre forcella e il telaio usando le viti M8 in dotazione. Una volta posizionato tutto correttamente stringere le viti ed infine inserire i 4 cappucci sulle viti di fissaggio del parabrezza.

